


Notification of Change: L-LAS-TB-Scope V5.4.2 to V5.4.3

This document summarises the changes that were made with the software update from **L-LAS-TB-Scope V5.4.2 to V5.4.3**.

New in V5.4.3:

	<h3>INTERN TRIGGER-MODE</h3> <p>Two additional internal auto-trigger modes: POS-EDGE L/H-TRIGG NEG-EDGE H/L-TRIGG</p> <p>Additional button to activate/deactivate Auto-Trigger function in graphical VIDEO output window. Depending on the mode set in INTERN-TRIGGER-MODE the POSITIVE-EDGE or NEGATIVE-EDGE button appears. If this button is active, the L-LAS-TB-Scope Application is WAITING FOR TRIGGER event.</p>
---	--

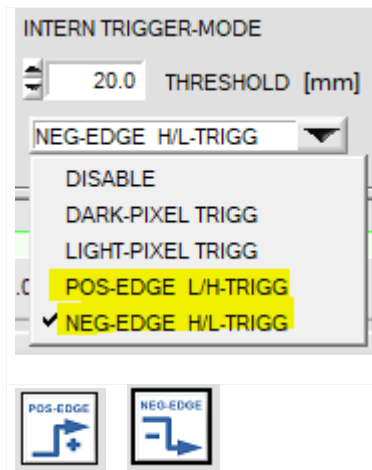